

MUSIC FINDER – U.K. update file

When you install the UK Music Finder the 'cryptic' titles listed in the original Music Finder will be replaced with normal (non-cryptic) titles.

1. Download the Music Finder file to a storage device appropriate to your instrument (USB stick, Floppy disk, Smart Media card etc.)
2. Insert the device containing the new Music Finder file into your keyboard.
3. Select the [FUNCTION] button from the instrument's panel. Then select [UTILITY] - [SYSTEM RESET] - [MUSIC FINDER FILES] from the screen. (See illustration below).
4. Go to the USB page - or the appropriate page for the device you used - and select the Music Finder file from the display.
5. Select [REPLACE].
This will replace the original Music Finder list with non-cryptic titles.
You'll find the original Music Finder file on the [PRESET] page - in case you need to replace it.

Keep the device with the new Music Finder file handy in case you ever have to reset the instrument.

